



Coffee table H186 double-layer installation diagram

FUR1313-2


| | |
|---|---|
|  |  |
| Sheet iron | Minimum self-tapping screws |
| A * 4 | B * 8 |

The shape of the board is different, and the installation method is the same!

Tips: Screw seven points tight during installation, and then tighten it after all is completed!

Installation steps:

Board name and serial number

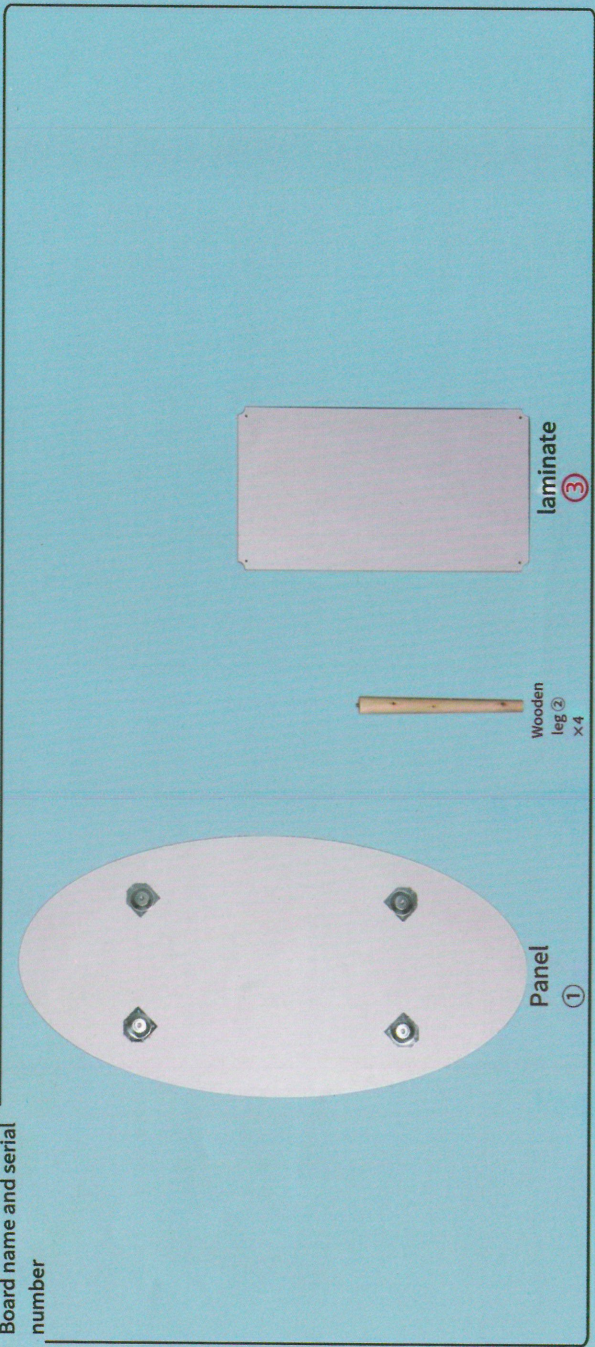



Step 1: Complete partial installation <1>



Coffee table H186 double-layer installation diagram

FUR1313-2


| | |
|---|---|
|  |  |
| Sheet iron | Minimum self-tapping screws |
| A * 4 | B * 8 |

The shape of the board is different, and the installation method is the same!

Tips: Screw seven points tight during installation, and then tighten it after all is completed!

Installation steps:

Board name and serial number

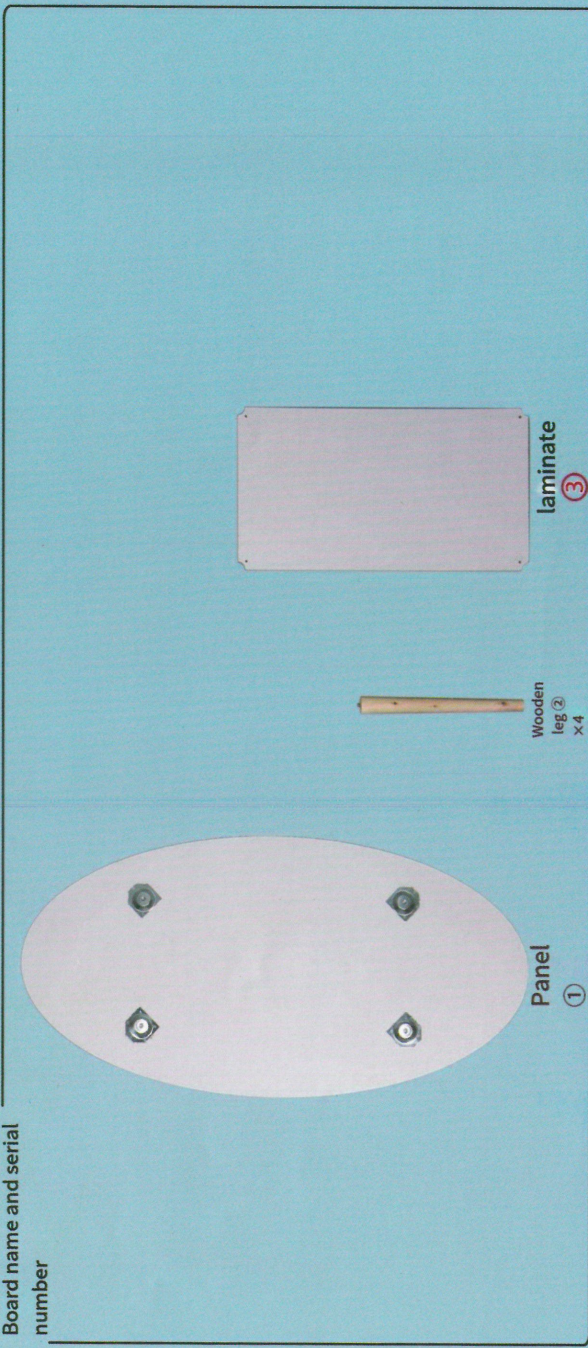

Step 1: Complete partial installation <1>

