


A297C 100/120CM installation diagram

一个*10	B*10	C*73	D*5	E*1	F*1	G*40	H*1







Tips: When installing the screws, tighten them by seven points, and then tighten them after all are completed!


Eccentric installation principle:

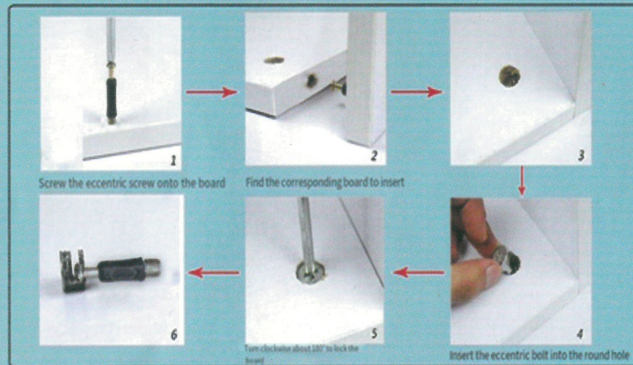

Installation steps:

Step 1: Drawer section installation

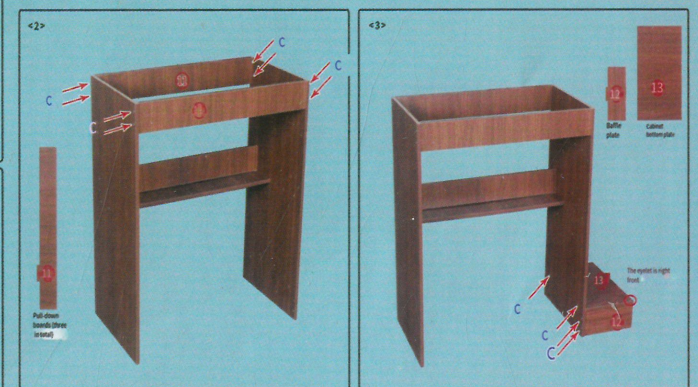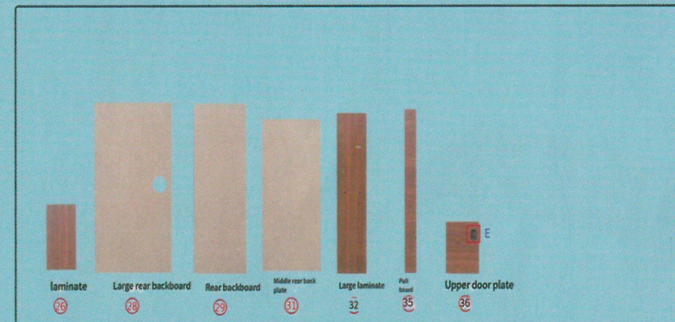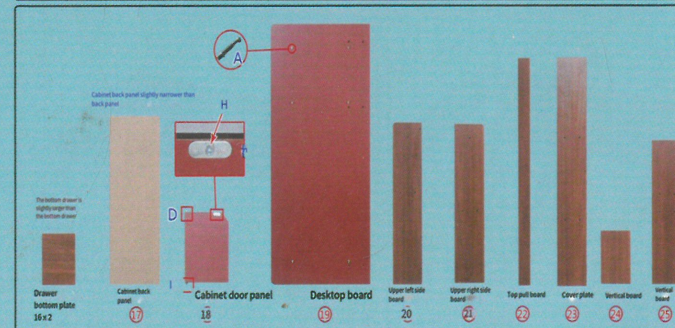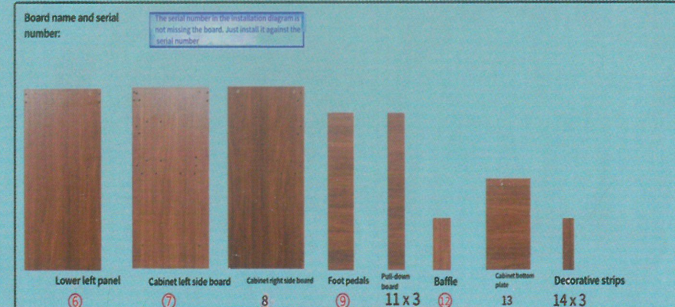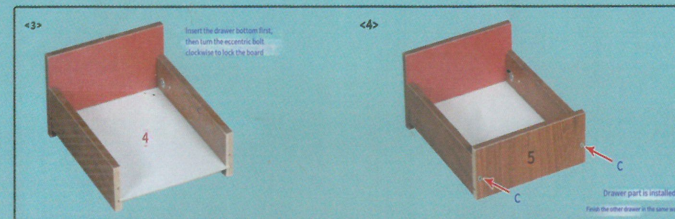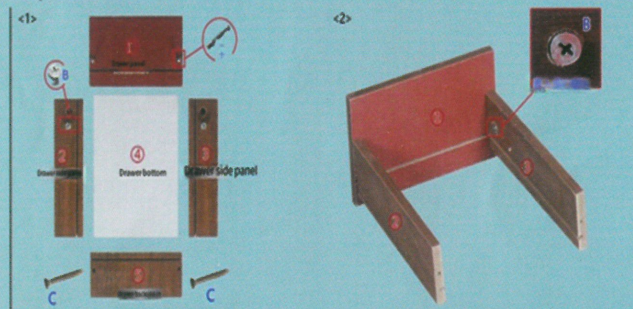

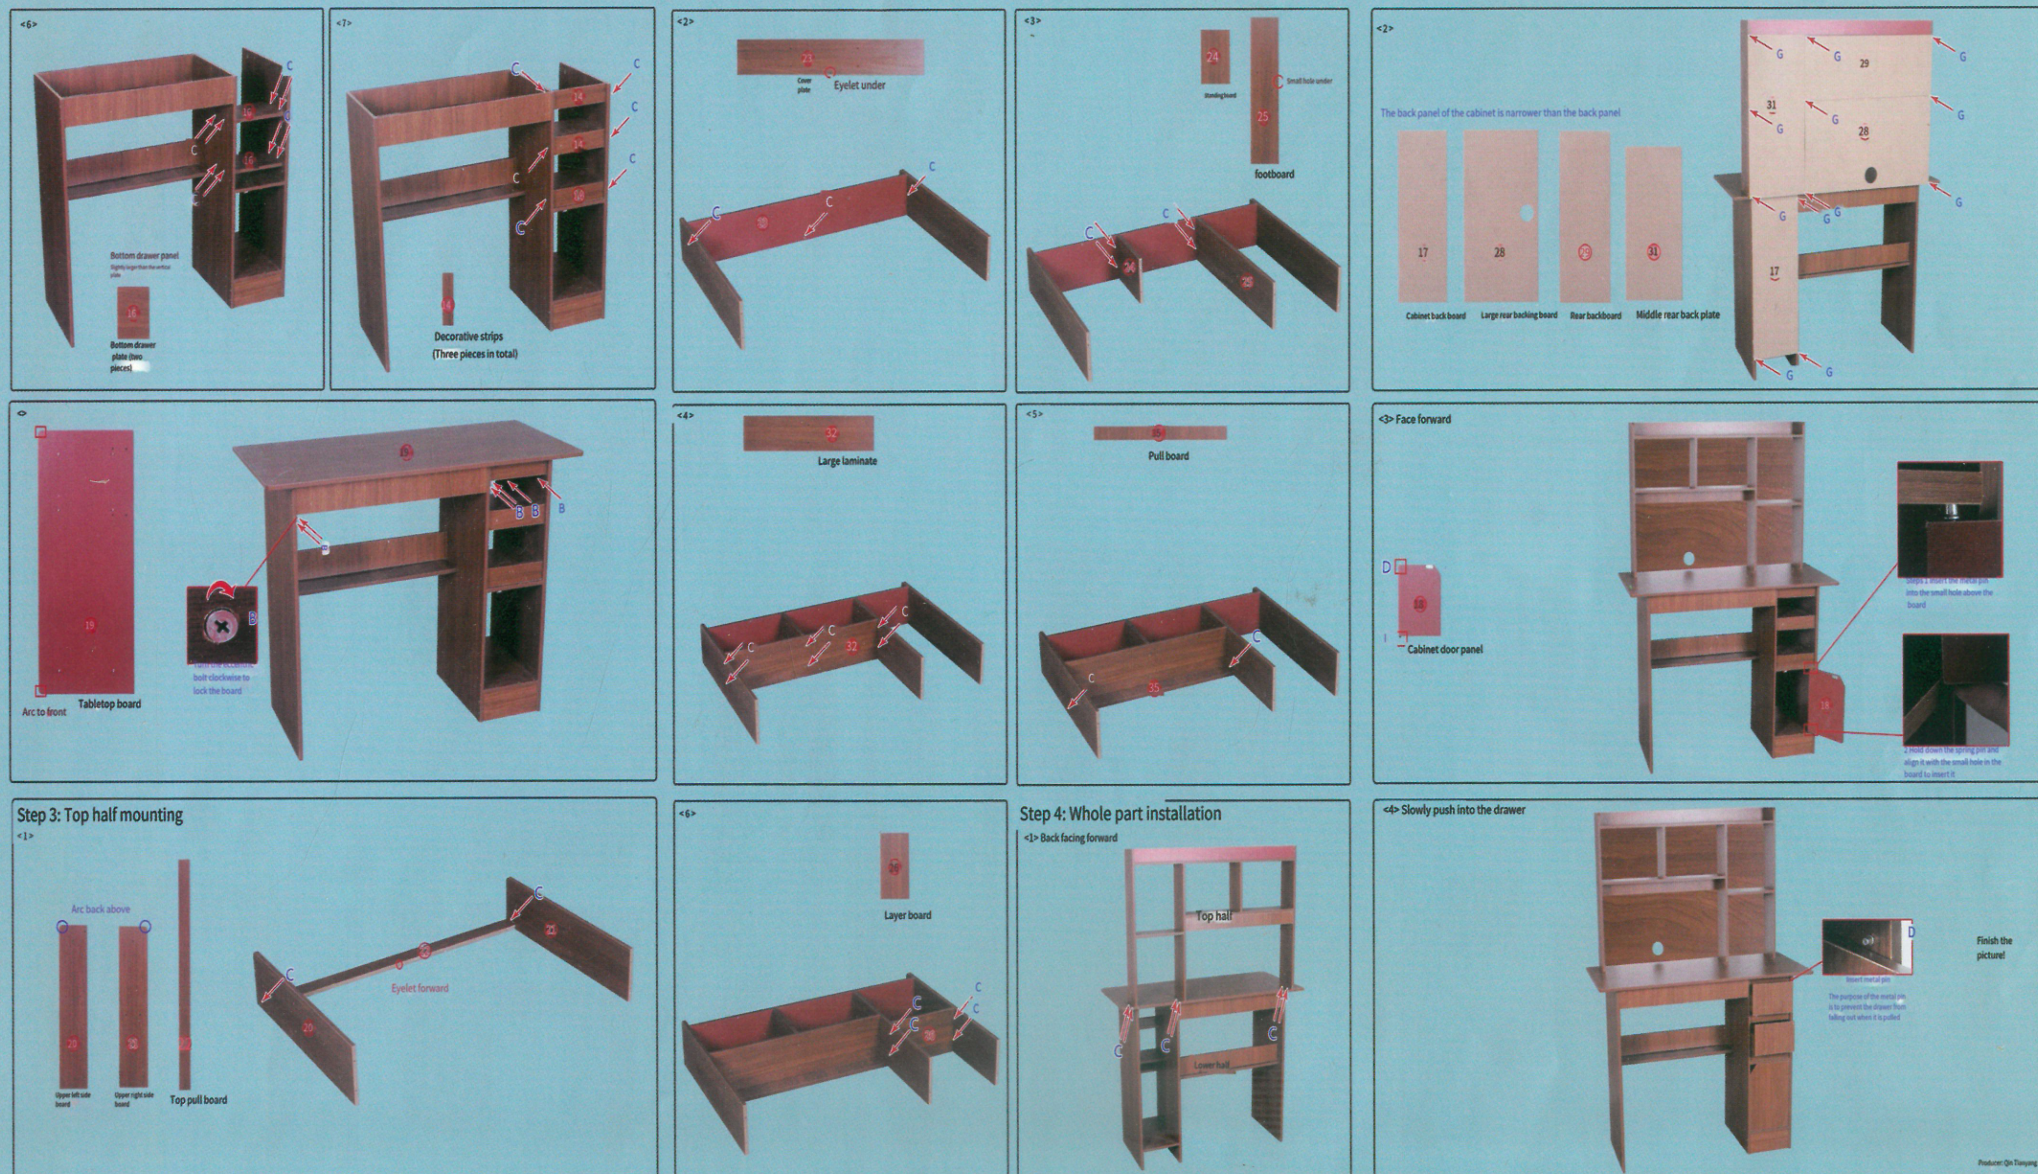

506-white