

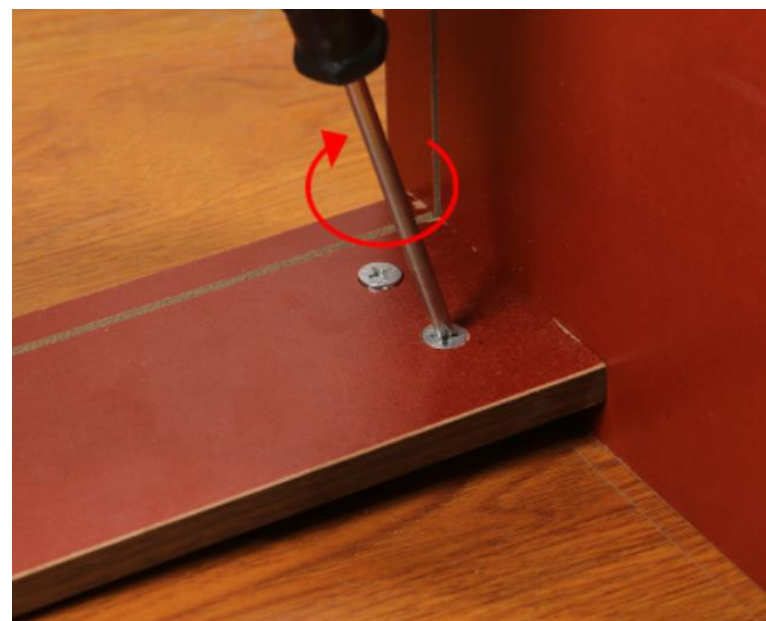


**FUR-1407 összeszerelési  
útmutató**

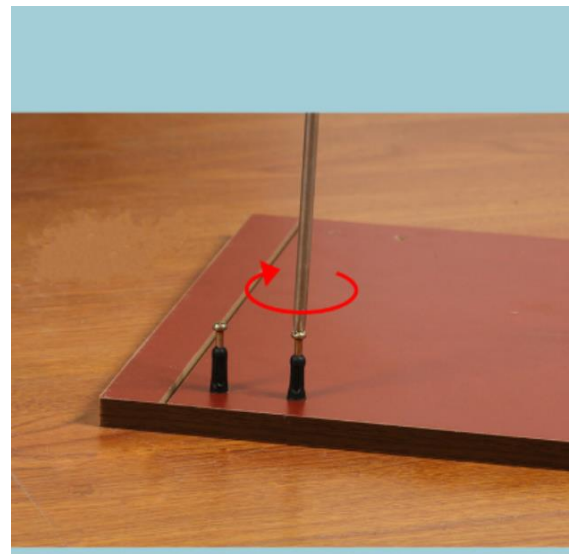


 A*6	 B*6	 4CM C*18
 D*2	 2CM E*4	 F*4

<1>

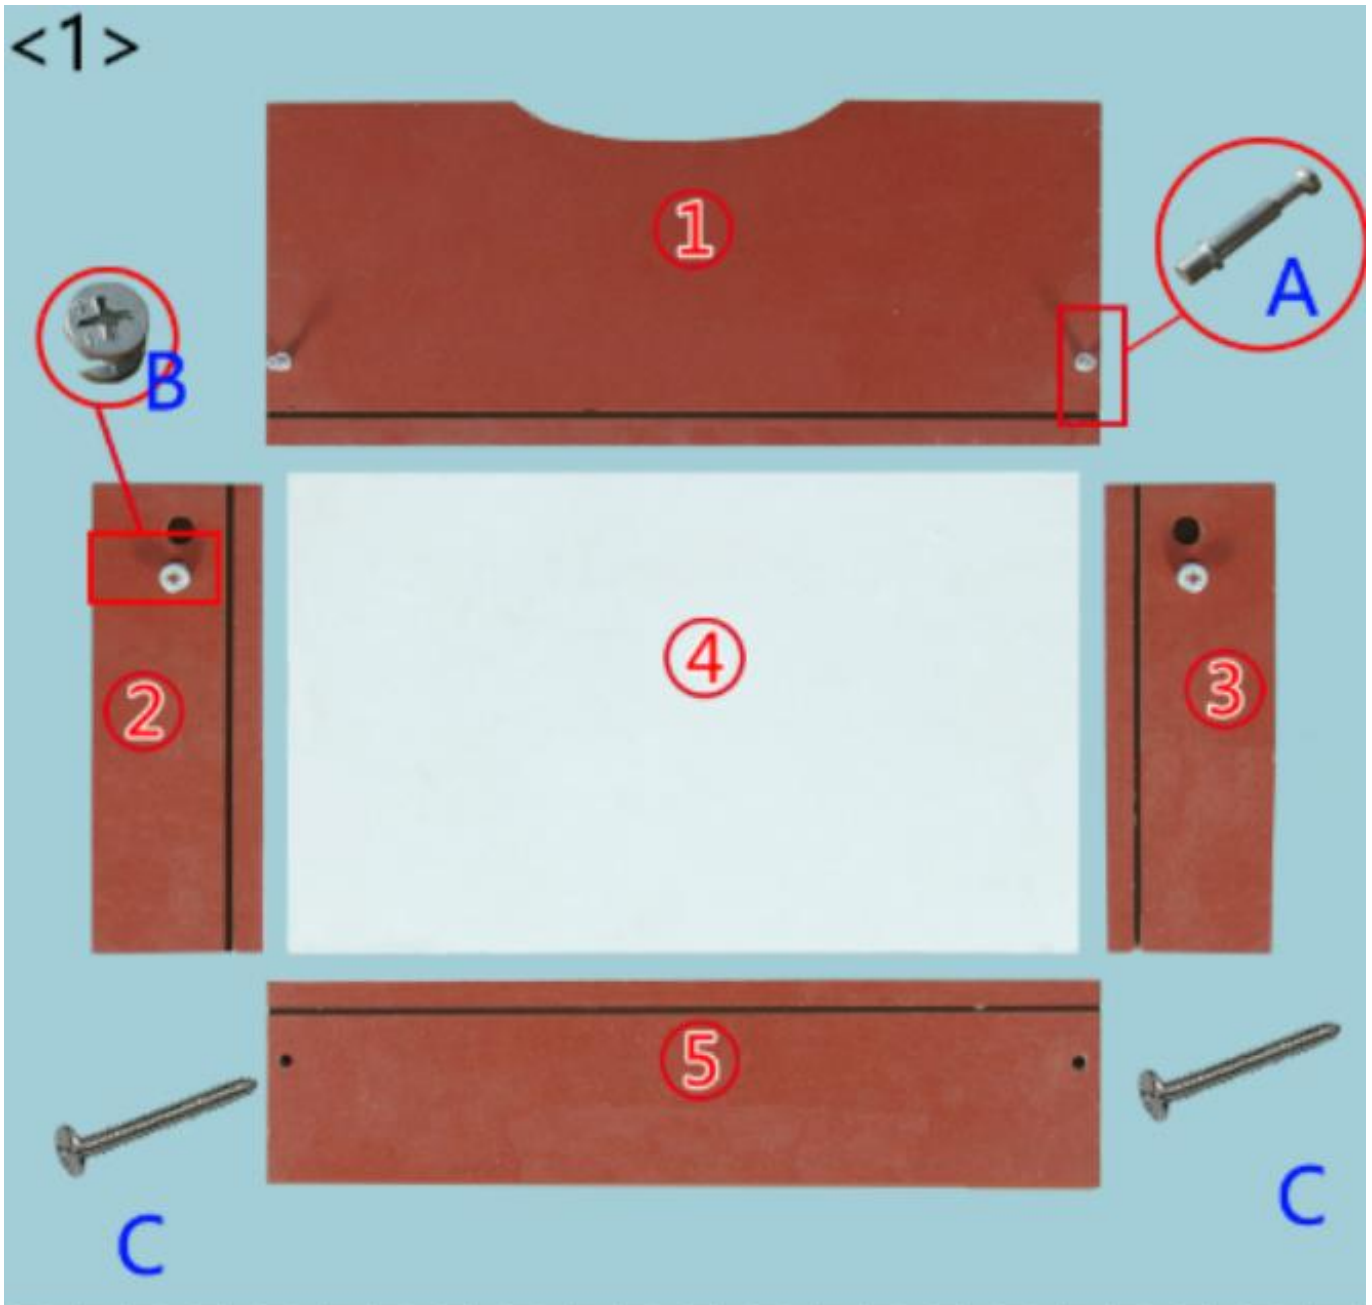


<2>

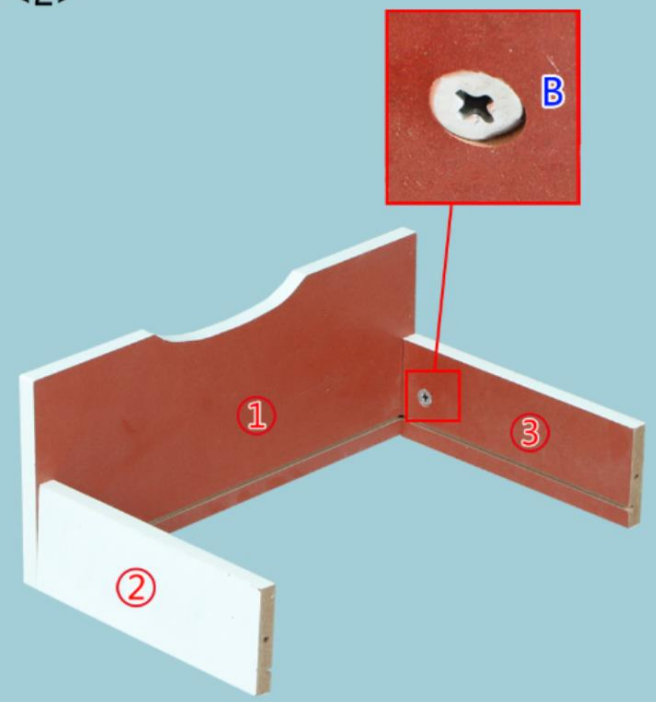

<3>



<4>

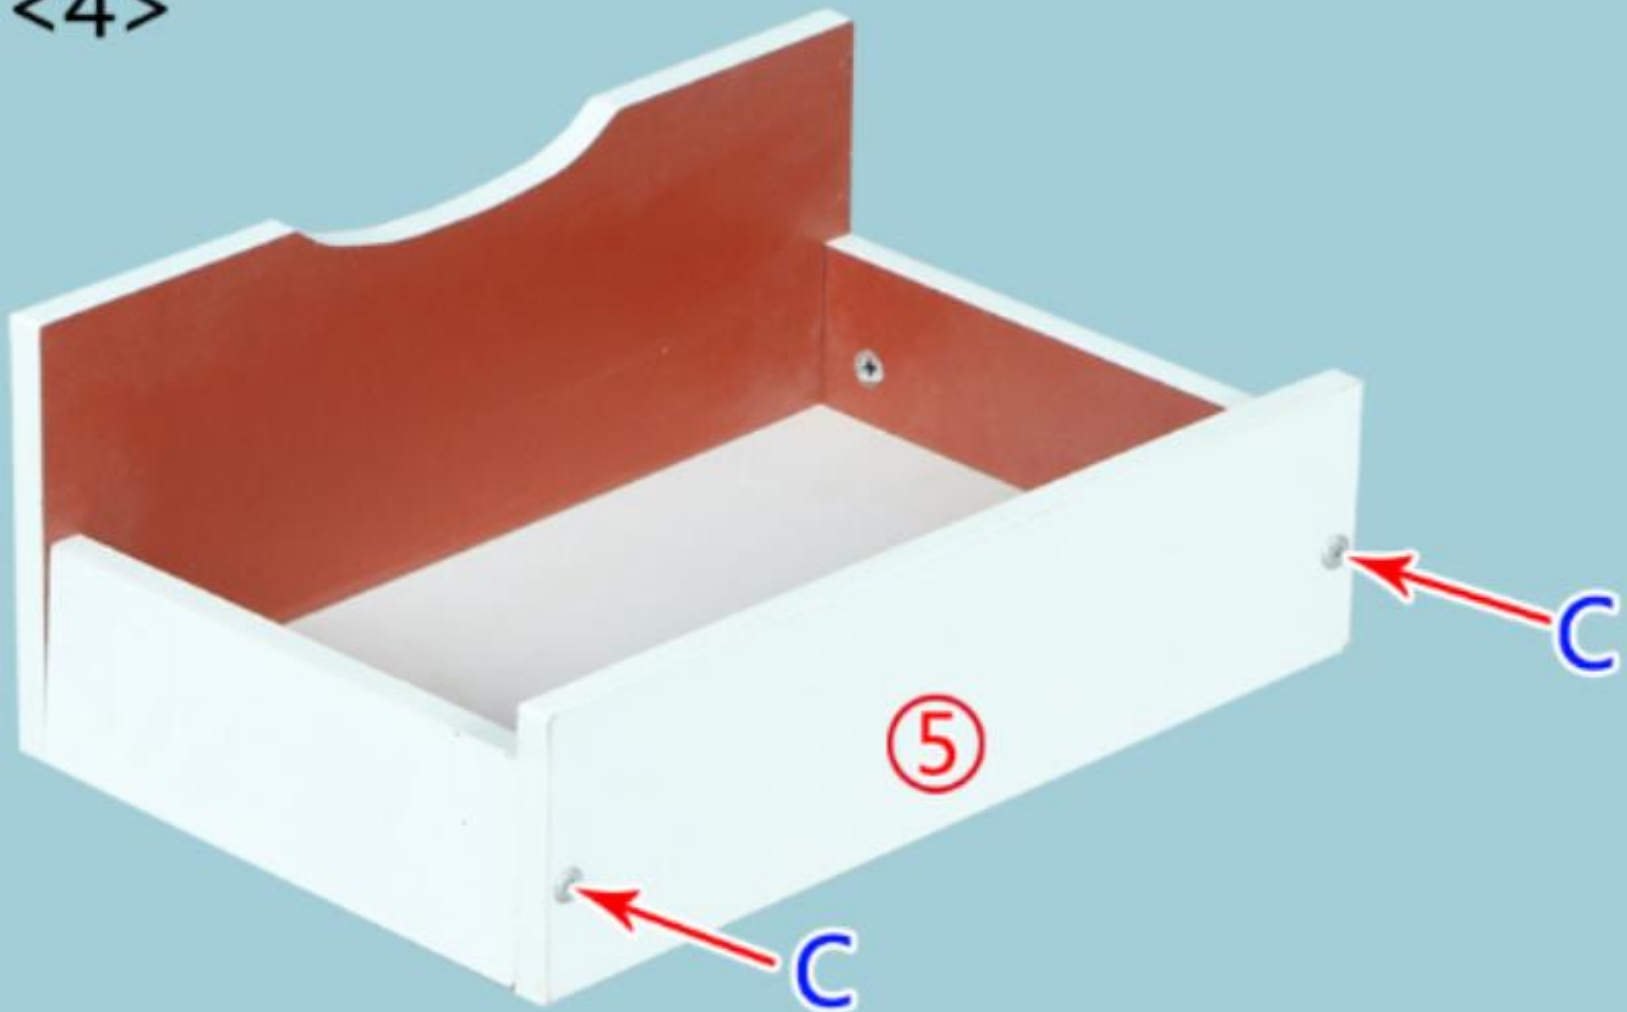



6



7




9



10



11

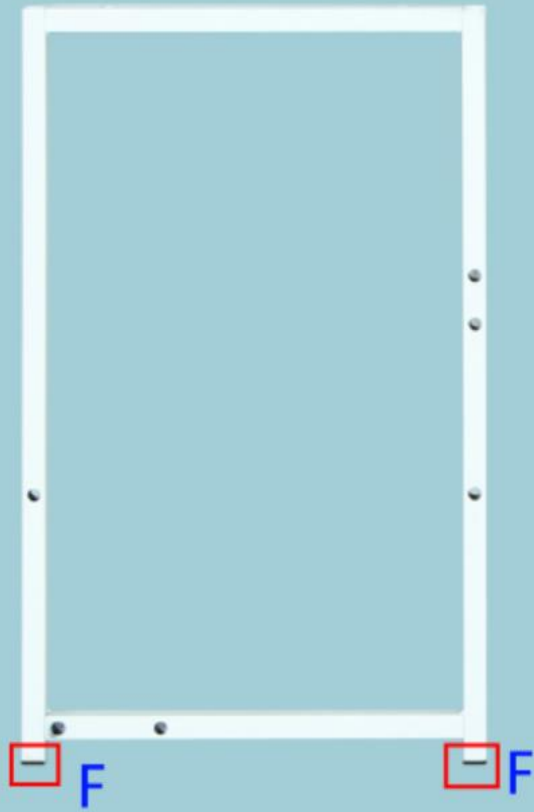

12x2



13


<1>



11



12

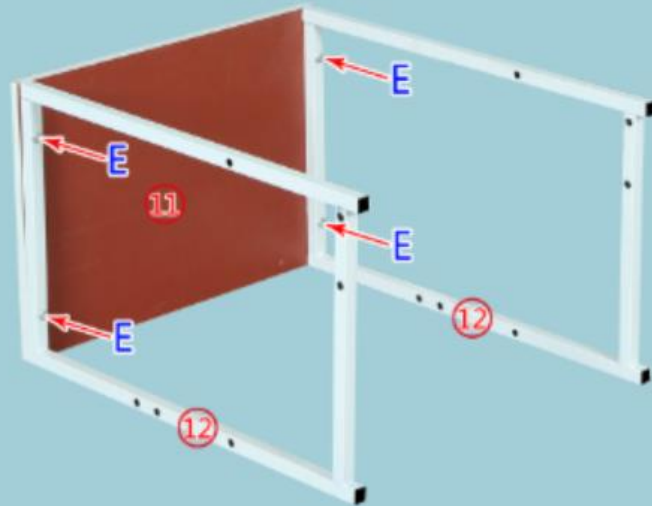

E

11

E

11


E

11


12

12


<2>

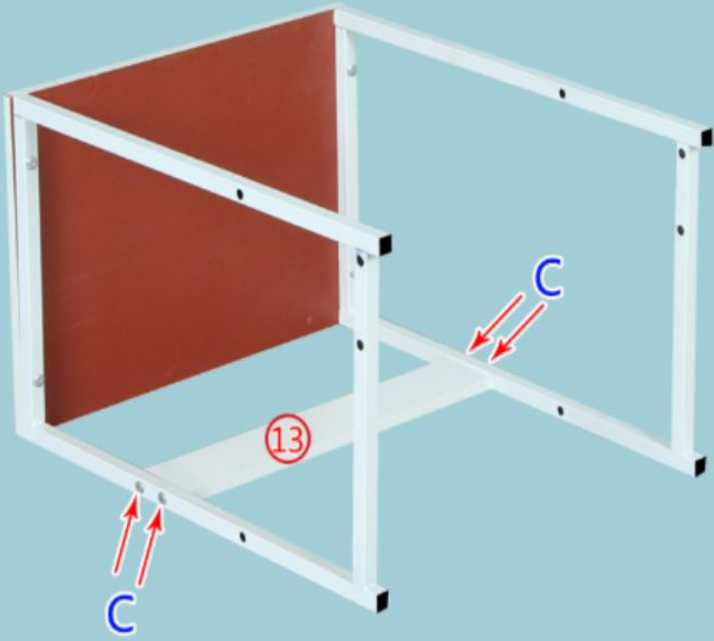


<3>

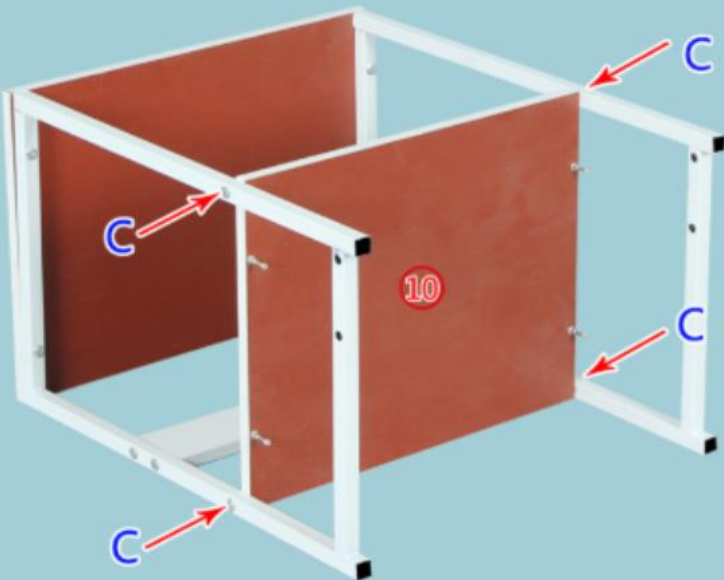

<4>

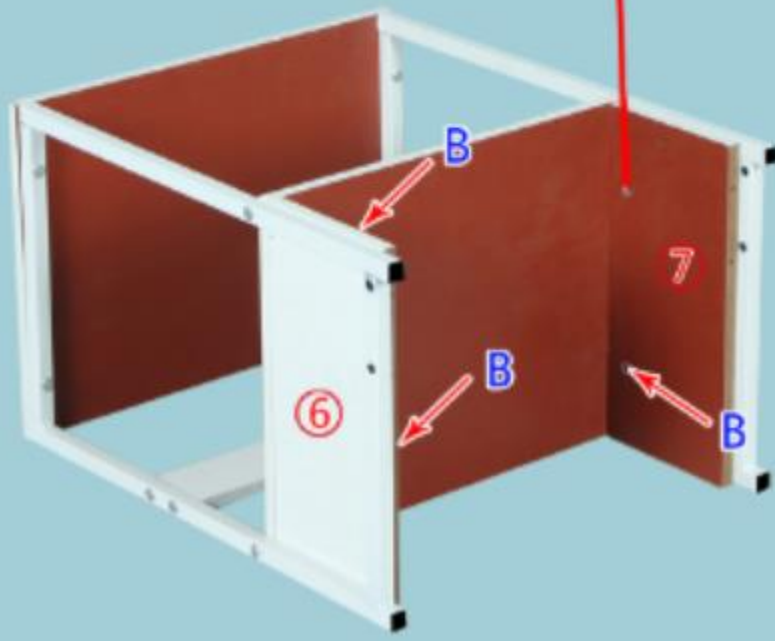

<5>

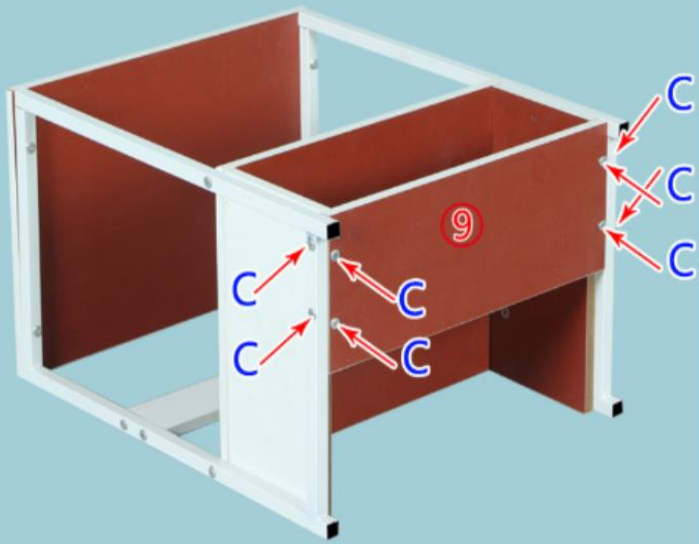

<6>



<7>

